Quictent
SHELTERS FOR MOST PEOPLE

User Manual

for Quictent Raised Garden Bed

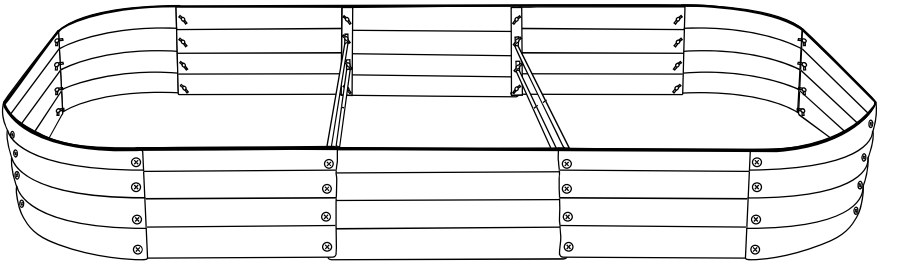

Please read, understand, and practice the guidelines in this user manual before use, and keep it for future reference.

8x4x1 FT 8x4x1.5 FT 8x4x2 FT

Table of Contents

- About Quictent 5
- 8x4x1 FT 6
- 8x4x1.5 FT 10
- 8x4x2 FT 14
- Warranty 18

IMPORTANT

We'd love to hear from our customers. If you have any questions about the manual or would like us to help in any way, please feel free to contact the support team. We will reply in 12 hours (working days).

Garden Beds from Quictent

6 x 3 x 1 FT (GB-12)

6 x 3 x 1.5 FT (GB-13)

6 x 3 x 2 FT (GB-14)

8 x 4 x 1 FT (GB-15)

8 x 4 x 1.5 FT (GB-16)

8 x 4 x 2 FT (GB-17)

43 x 63 x 26 IN (GB-18)

This user manual applies to Quictent Raised Garden Bed. It will help you to get to know your Quictent Raised Garden Bed. Please read the guidelines in this manual and keep the manual for future reference.

We may update the manual without notice in advance. You can always search **"Quictent Instructions"** online for the latest version.

About Quictent

Founded in the early 21st century, Quictent has grown into a popular brand with reliable products and excellent customer service during the past decades. We started with pop up canopies, and then expanded to other more categories for shelters and the like including party tents, carports, greenhouses, garden beds, grow tents, shade sails, patio umbrellas, and RV covers. Driven by the vision to create unique spaces to meet every specific need and become a part of America's landscape, we at Quictent would spare no effort to keep innovating.

Our Vision

To create unique spaces to meet every specific need, and become a part of America's landscape.

Our Mission

To keep innovating and provide a wide range of reliable shelters and shades at consumer-grade prices with customer-first service.

Our Service

The customer-centric service is what we at Quictent take great pride in. In addition to the hassle-free warranty covering all Quictent products, an industrial-leading support team is standing behind at all times. Whenever you need help or have any suggestions and comments, do not hesitate to contact the Quictent support team. We'll get back as soon as possible and you're sure to get a to-the-point reply in 12 hours.

8 x 4 x 1 FT

You'll receive only one (1) box. Please make sure all parts are numbered and graphically indexed as shown, so does the quantity for each part upon arrival. If you need any help, please **CONTACT the support team with the order number, required parts, quantity for each part, and photos** (or videos, if applicable), we will get back to help out soon.

Parts List

- Apply to the **Model #GB-15**.
- Please **remove all the protective film** from the panels before installing the **Model #GB-15BE (COLOR: BEIGE)**.
- Please be aware that there are sharp edges in panels that may cause injury. Gloves **(#H)** will protect your hands well when checking parts and installation.
- It's up to you whether to lay the Weed Barrier **(#J)** before the assembly or not. It is recommended to lay panels on a soft flat surface such as grass will protect the paint from scratching.
- The T-Type Tags **(#I)** are gifts for your future gardening. You'll NOT use them in assembly.

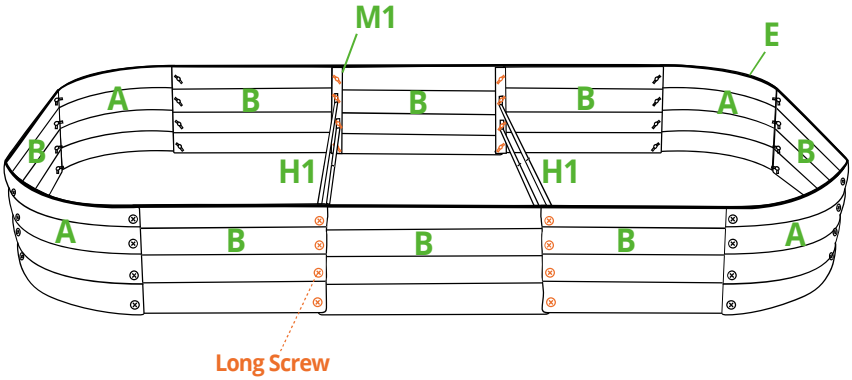

Part Number	Diagram	Description	Quantity (PCS)
#A		Curved Panel	4
#B		Straight Panel	8
#H1		Horizontal Rod	8
#M1		Vertical Rod	4
#E		Rubber Edging	1
#F		Screw Bag (16 x Long Screws & 40 x Short Screws)	56
#G		Screwdriver	1
#H		Glove	2
#I		T-Type Tag	8
#J		Weed Barrier	1

Assembly

Step 1. Start from the two ends of the garden bed. Finish forming one end by connecting 3 x Straight Panels (#B) and 2 x Curved Panels (#A) with the short screws; then finish the other end by repeating what you've done.

Reminders!

- Please note that the **rolled edge** of the panels should be placed **on the top**, and should be placed towards the **inside** of the product.
- The Curved Panels (#A) should always be on the **outside** (away from the interior of the garden bed).
- Please insert the screw bolts from the outside to the inside. That is, all the screw nuts should be inside the structure.

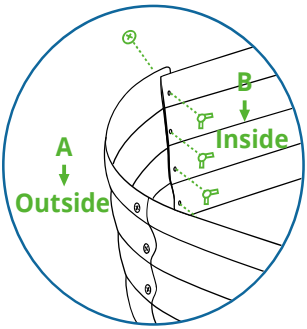

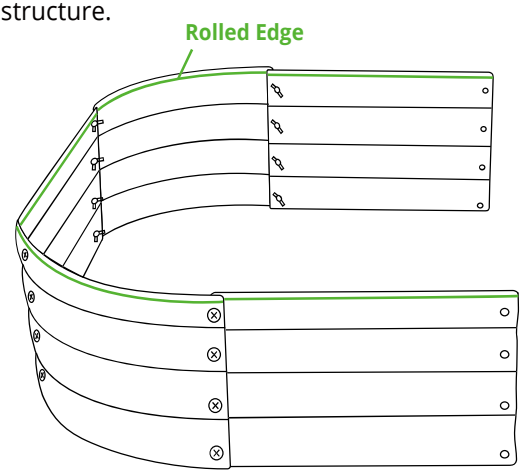

Step 2. As shown, form a long rod with 2 x Horizontal Rods (#H1) until you get four long rods.



Step 3. Align the Vertical Rod (#M1) with the pre-formed holes **inside** the 2 x Straight Panels (#B), then fix the panels, the vertical rod, and the end of the long rod (formed in the previous step. 2) together with **long screws**. Repeat what you've done until you finish assembling all four vertical rods.

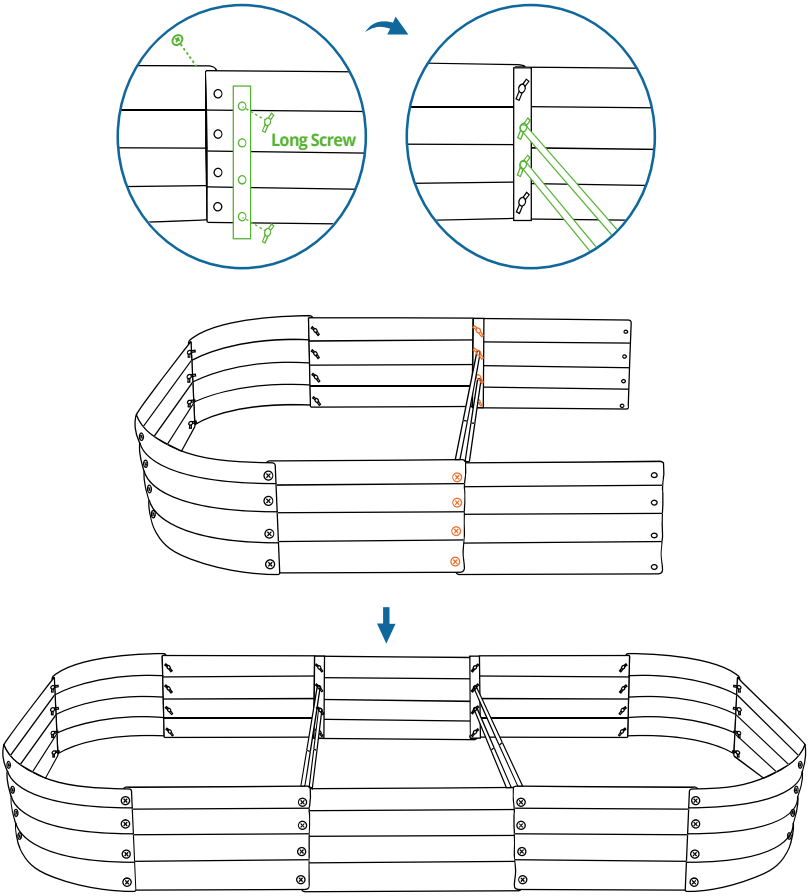

Step 4. Align the Rubber Edging (#E) with the top edge of the garden bed and press to make them fit tightly.

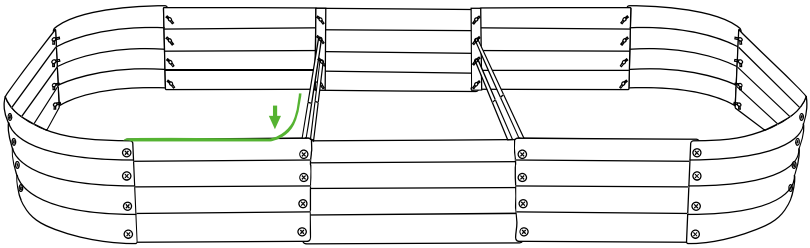

8 x 4 x 1.5 FT

You'll receive only one (1) box. Please make sure all parts are numbered and graphically indexed as shown, so does the quantity for each part upon arrival. If you need any help, please **CONTACT the support team with the order number, required parts, quantity for each part, and photos** (or videos, if applicable), we will get back to help out soon.

Parts List

- Apply to the **Model #GB-16**.
- Please **remove all the protective film** from the panels before installing the **Model #GB-16BE (COLOR: BEIGE)**.
- Please be aware that there are sharp edges in panels that may cause injury. Gloves **(#H)** will protect your hands well when checking parts and installation.
- It's up to you whether to lay the Weed Barrier **(#J)** before the assembly or not. It is recommended to lay panels on a soft flat surface such as grass will protect the paint from scratching.
- The T-Type Tags **(#I)** are gifts for your future gardening. You'll NOT use them in assembly.

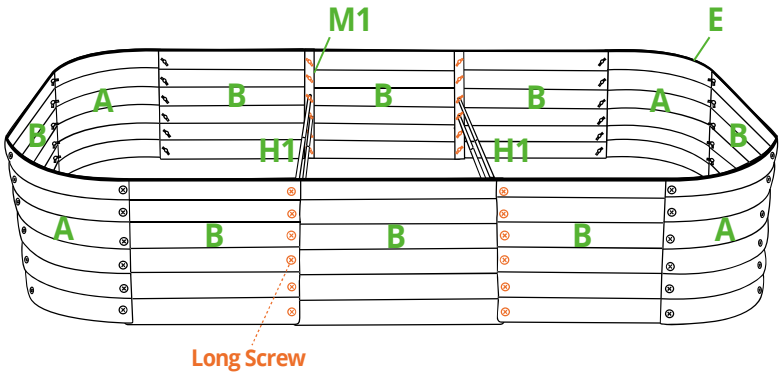

Part Number	Diagram	Description	Quantity (PCS)
#A		Curved Panel	4
#B		Straight Panel	8
#H1		Horizontal Rod	8
#M1		Vertical Rod	4
#E		Rubber Edging	1
#F		Screw Bag (26 x Long Screws & 56 x Short Screws)	82
#G		Screwdriver	1
#H		Glove	2
#I		T-Type Tag	8
#J		Weed Barrier	1

Assembly

Step 1. Start from the two ends of the garden bed. Finish forming one end by connecting 3 x Straight Panels (#B) and 2 x Curved Panels (#A) with the short screws; then finish the other end by repeating what you've done.

Reminders!

- Please note that the **rolled edge** of the panels should be placed **on the top**, and should be placed towards the **inside** of the product.
- The Curved Panels (#A) should always be on the **outside** (away from the interior of the garden bed).
- Please insert the screw bolts from the outside to the inside. That is, all the screw nuts should be inside the structure.

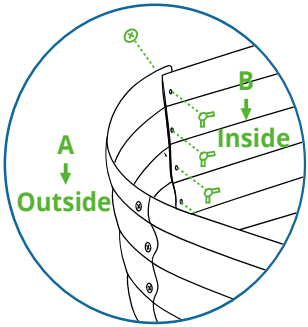

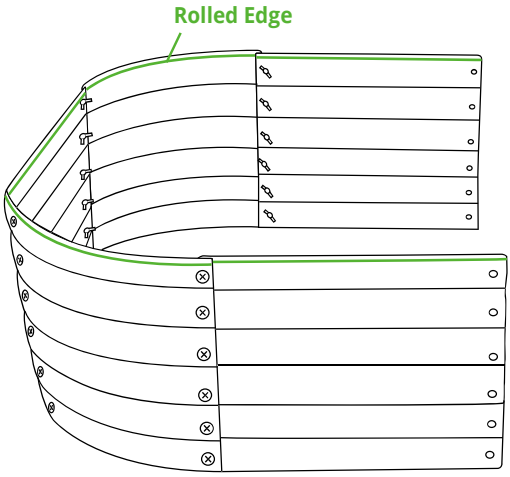

Step 2. As shown, form a long rod with 2 x Horizontal Rods (#H1) until you get four long rods.



Step 3. Align the Vertical Rod (#M1) with the pre-formed holes **inside** the 2 x Straight Panels (#B), then fix the panels, the vertical rod, and the end of the long rod (formed in the previous step. 2) together with **long screws**. Repeat what you've done until you finish assembling all four vertical rods.

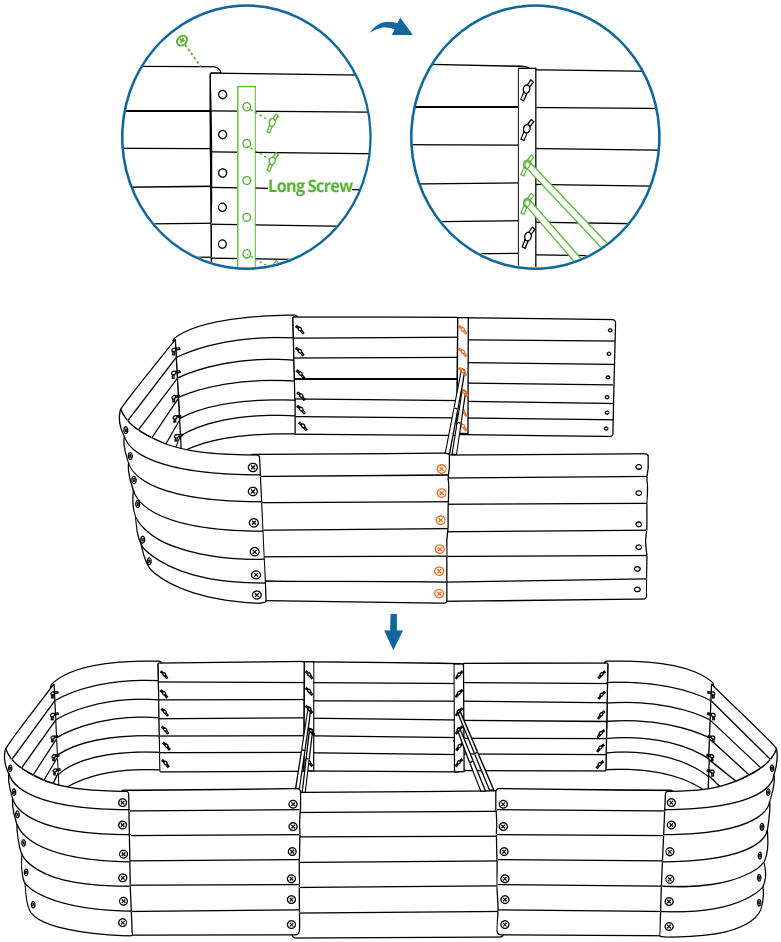

Step 4. Align the Rubber Edging (#E) with the top edge of the garden bed and press to make them fit tightly.

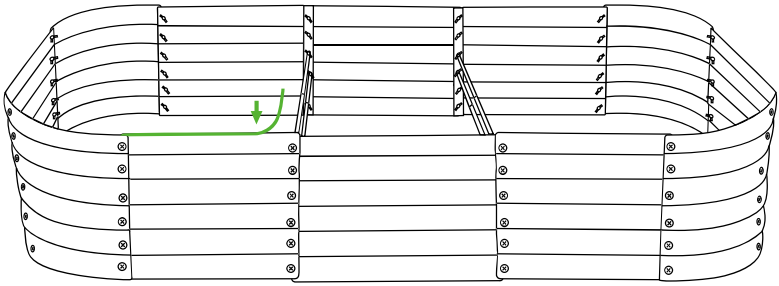

8 x 4 x 2 FT

You'll receive only one (1) box. Please make sure all parts are numbered and graphically indexed as shown, so does the quantity for each part upon arrival. If you need any help, please **CONTACT the support team with the order number, required parts, quantity for each part, and photos** (or videos, if applicable), we will get back to help out soon.

Parts List

- Apply to the **Model #GB-17**.
- Please **remove all the protective film** from the panels before installing the **Model #GB-17BE (COLOR: BEIGE)**.
- Please be aware that there are sharp edges in panels that may cause injury. Gloves **(#H)** will protect your hands well when checking parts and installation.
- It's up to you whether to lay the Weed Barrier **(#J)** before the assembly or not. It is recommended to lay panels on a soft flat surface such as grass will protect the paint from scratching.
- The T-Type Tags **(#I)** are gifts for your future gardening. You'll NOT use them in assembly.

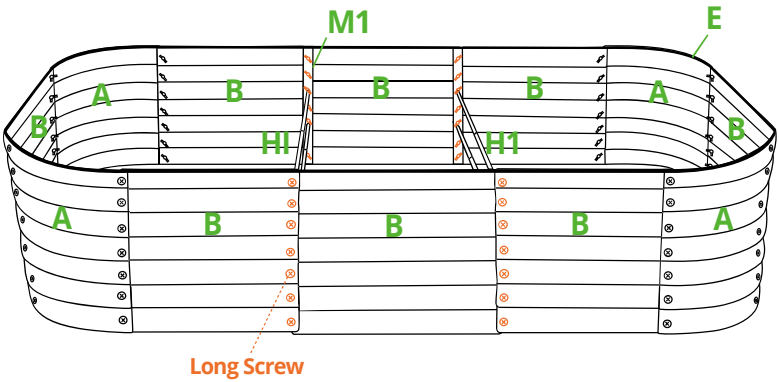

Part Number	Diagram	Description	Quantity (PCS)
#A		Curved Panel	4
#B		Straight Panel	8
#H1		Horizontal Rod	8
#M1		Vertical Rod	4
#E		Rubber Edging	1
#F		Screw Bag (30 x Long Screws & 62 x Short Screws)	92
#G		Screwdriver	1
#H		Glove	2
#I		T-Type Tag	8
#J		Weed Barrier	1

Assembly

Step 1. Start from the two ends of the garden bed. Finish forming one end by connecting 3 x Straight Panels (#B) and 2 x Curved Panels (#A) with the short screws; then finish the other end by repeating what you've done.

Reminders!

- Please note that the **rolled edge** of the panels should be placed **on the top**, and should be placed towards the **inside** of the product.
- The Curved Panels (#A) should always be on the **outside** (away from the interior of the garden bed).
- Please insert the screw bolts from the outside to the inside. That is, all the screw nuts should be inside the structure.

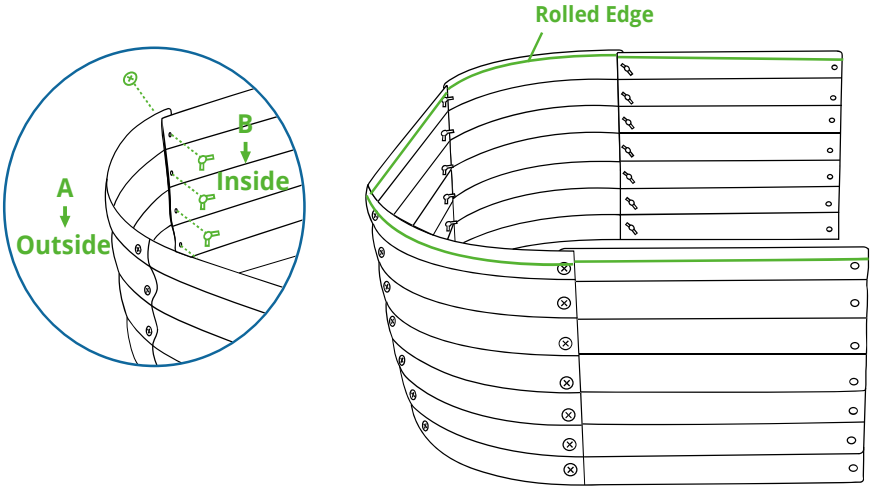

Step 2. As shown, form a long rod with 2 x Horizontal Rods (#H1) until you get four long rods.



Step 3. Align the Vertical Rod (#M1) with the pre-formed holes **inside** the 2 x Straight Panels (#B), then fix the panels, the vertical rod, and the end of the long rod (formed in the previous step. 2) together with **long screws**. Repeat what you've done until you finish assembling all four vertical rods.

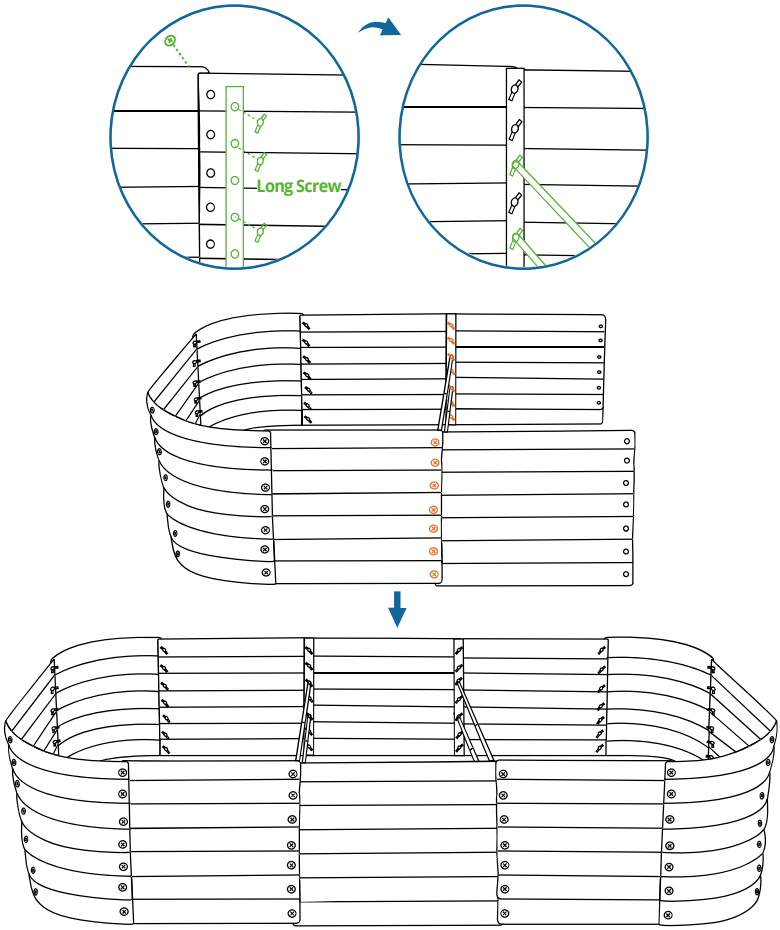

Step 4. Align the Rubber Edging (#E) with the top edge of the garden bed and press to make them fit tightly.

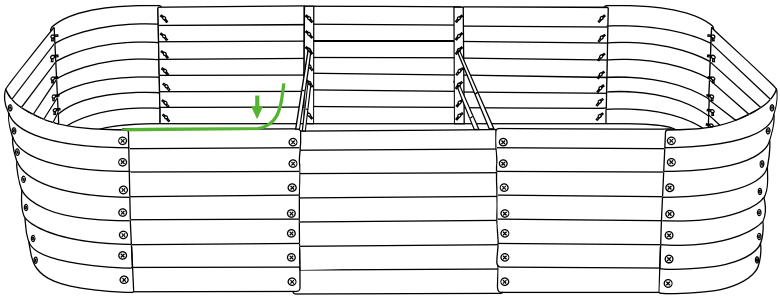

Warranty

The limited warranty covering the materials and the craftsmanship under normal use and service conditions takes effect from the purchase date (on the invoice). We provide warranty for the whole raised garden bed.

Reminder

1. Please note that the order purchase proof (order number or shipping information on the shipping carton) is the only valid evidence to claim for warranty. In the event that you failed to access your order information online, we strongly advise you to keep the original packaging and shipping carton(s).

2. To get what you need as soon as possible, we strongly suggest you provide all of the following information **at your first inquiry:**

- Order number
- Part number
- Quantity required for each part
- Pictures (or video clips, if applicable)

Warning

- Restructuring the product without written permission from Quictent in advance would **VOID** the warranty.

- Damages due to improper use in severe weather conditions, including but not limited to high winds, heavy rain, sleet, snow, etc., will NOT be covered by the warranty.

Quictent

SHELTERS FOR MOST PEOPLE